

Metrologic Setting (Eclipse MS5145)

1. 시작


Setting Start



3 9 9 9 9 9 9

2. 기본값 세팅

Set All Defaults (Note)



3 9 9 9 9 9 8

3. 읽는 속도 (선택)

400 msec



3 3 0 1 3 4 0

100 msec



3 3 0 1 3 1 0

4. 스위치 모드 (선택사항)

(자동)



3 1 1 8 7 0 3


(수동)



3 1 1 8 7 1 3


5. 바코드 앞에 * 붙임

Prefix




3 9 0 3 5 0 0

0




3 0

4



3 4

2



3 2

6. 세팅종료

Setting Completion



3 9 9 9 9 9 9